


GB TRAE 6562

QUICK REFERENCE GUIDE

Please also carefully read the "Instructions for Use".

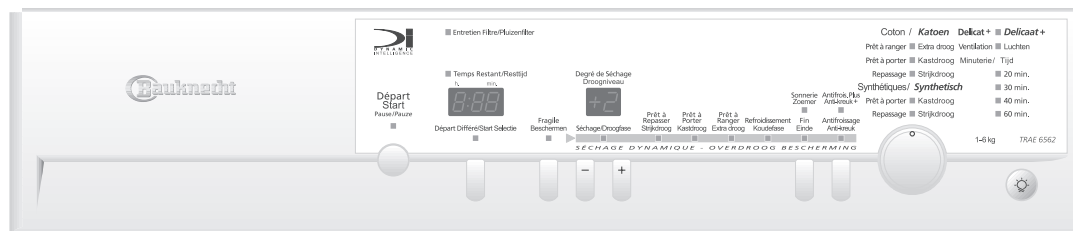

	Very Wet Load	Wet Load	Load	Drying options		Drying options				
	Indicative drying times (in minutes)		Kg	Fabric Drying Cycles & Drying levels		Fragile Beschermen Gentle Reduces drying intensity (recommended for delicate items)	Séchage/Droogfase Dryness Adjustment (Adjusts Dryness Level according to wishes)	Buzzer & Anti-Crease cannot be selected together	Buzzer & Anti-Crease cannot be selected together	
								Sonnerie Zoemer Buzzer Signals/ Sounds end of drying cycle at intervals	Antifroissage Anti-creuk Anti-Crease Prevents laundry from creasing	Départ Différé/Start Selectie Start Delay Delays the drying cycle start
Cotton	85' 140'	70' 120'	3.0 6.0	Cotton Coton / Katoen max 6 kg	Prêt à Ranger Extra-droog	Ready to wear	Coton / Katoen	Coton / Katoen	Coton / Katoen	Coton / Katoen
	70' 110'	50' 95'	3.0 6.0		Prêt à Porter Kastdroog	Cupboard dry *	Coton / Katoen	Coton / Katoen	Coton / Katoen	Coton / Katoen
	50' 95'	45' 75'	3.0 6.0		Prêt à Repasser Strykdroog	Iron dry *	Coton / Katoen	Coton / Katoen	Coton / Katoen	Coton / Katoen
Mixed Fabrics	20' 35'	15' 30'	1.0 2.5	Mixed Fabrics Synthétiques/ Synthetisch max 2.5 kg	Prêt à Ranger Kastdroog	Cupboard dry *	Synthétiques/ Synthetisch	-	Synthétiques/ Synthetisch	Synthétiques/ Synthetisch
	15' 30'	10' 25'	1.0 2.5		Prêt à Repasser Strykdroog	Iron dry	Synthétiques/ Synthetisch	-	Synthétiques/ Synthetisch	Synthétiques/ Synthetisch
Extra Care	60'	45'	2.5	Extra care Delicat + Delicaat + max 1.5 kg	Low drying intensity for delicates and garments labelled		-	-	Delicat + Delicaat +	Delicat + Delicaat +
Airing	-	-	-	Airing Ventilation Luchten	Laundry is aired and refreshed for 30 minutes without heating.		-	-	Ventilation III Luchten	Ventilation III Luchten
Time	-	-	-	20 min. 30 min. 40 min. 60 min.	Completes drying or dries single items (suitable for all fabrics).		-	-	20 min. 30 min. 40 min. 60 min.	20 min. 30 min. 40 min. 60 min.

Start Pause Départ Start Pause/Pauze	Starts the drying cycle. The Start/ Pause indicator lamp is blinking during the selection phase. Press to confirm the final selection.
Programme selection	Turn the programme selector knob to the desired programme. The indicator next to the programme name lights up. The start indicator blinks to show, that the dryer is in selection mode. After the Start / Pause button is pressed the start indicator lamp lights up and the programme starts.
Start delay Départ Différé/Start Selectie	Delays the drying cycle start from 1 up to 12 hours. To select the start delay turn the programme selector knob to the desired programme, select the desired options and press the start delay button. With each touch of the start delay button, drying cycle start is delayed by one hour. Press the Start/Pause button to confirm your final selection. Start delay indicator blinks and the count-down is running by reducing the time in one hour steps. The count-down is indicated by the blinking of the start-delay indicator located above the button. During count-down the drum will turn from time to time to redistribute the laundry. The pump may be heard working for a short time. To cancel or to change the previously set time turn programme selector knob to "0" or open the door.
Remaining time Temps Restant/Resttijd	After cycle start a default drying time is indicated depending on the selected drying programme and the dryness adjustment. After 15 seconds the time will be adjusted to the real expected remaining time, depending on size, type and humidity of the load.
Dryness Adjustment Degré de Séchage Droogniveau	Dryness adjustment is an option to adjust the dryness of the laundry according to your wishes. Select the desired programme and the option dryness level adjustment by pressing the button "+" for more dry or the button "-" for more humid. The selected dryness will be stored as a pre-setting to the selected drying programme. Using the drying programme next time the pre-setting appears. By pressing the dryness adjustment buttons "+" or "-" the pre-setting can be changed.
Filter Extinction Filtration Filter	The indicator lamp lights up when the filter needs cleaning. Clean the filter at the end of every cycle.
PROGRAMME SEQUENCE INDICATION	
The programme sequence is indicated by lamps, switching on when programme step starts and switching off when the programme step is passed.	

* Test programmes according IEC 61121.

5019 407 00414

PREPARING THE LAUNDRY

1. Check that all fastenings are closed and that pockets are empty.
2. Turn the articles inside out.
3. Place laundry loosely in the drum to make sure it doesn't become tangled.

Sort laundry as follows:

A) By care symbols (on the collar or inside seam):



Suitable for tumble drying



Tumble drying with reduced drying intensity only. Press gentle button or select specific programme



Do not tumble dry

B) By amount and thickness/weight

Whenever the load to be dried exceeds dryer capacity, separate laundry according to weight (e.g. towels from thin underwear).

C) By type of fabrics

Cotton/linen: towels, cotton jersey, bed and table linen made of cotton or linen.

Synthetics/Easy Care: blouses, shirts, overalls, etc. made of polyester or polyamide, as well as cotton/synthetic mixes.

D) By drying level

- Sort into: iron dry, cupboard dry, etc.

Do not tumble dry: woollens, silk, nylon stockings, delicate embroidery, fabrics with metallic decorations, bulky items such as sleeping bags, etc.

Important: only use specific indicated dryer-safe additives and rinse items that have been treated with stain remover thoroughly in plenty of water before drying. **Only use specific indicated dryer-safe plastic items** and never dry rubber or articles contaminated with vegetable oil in the dryer

DRUM LIGHT OPTION



(Option only available when Programme is selected).

Push the button to turn the drum light on for 30 sec. and push again to turn the drum light off..

SELECTING A PROGRAMME & OPTIONS

Programme and Options:

- To select a programme, turn the programme selector knob. The Start/Pause indicator lamp is blinking, indicating that the cycle needs to be started.
- To select an option, press the corresponding button. The indicator lamp above the button confirms that a selection has been made.
- Press the button again to cancel the option.

STARTING & COMPLETING A PROGRAMME

1. Having selected the desired programme and options, press the Start button. If the laundry is not removed at the end of the drying cycle, an automatic anti-crease cycle will operate for maximum 60 min. The drum rotates at regular intervals, preventing the laundry from creasing.
Anti-Crease protection re-distributes laundry in the drum. When the Anti-Crease option is selected and laundry has not been taken out, an anti-crease cycle is activated for 12 hrs.
2. On completion of the programme, set the programme selector knob to position "0".

CHANGING A PROGRAMME

When changing the programme during the drying cycle, the dryer stops. The Start/Pause indicator lamp is blinking. To operate the new programme, press the Start/Pause button again.

INTERRUPTING A PROGRAMME

To interrupt the dryer during operation

1. Set the programme selector knob to Airing.
2. Press the Start button. Wait at least 5 minutes before opening the door to allow the dryer to cool down. For your safety the programme stops automatically if you open the door.
3. To restart, after door opening, close the door and press the Start/Pause button again.

DAILY MAINTENANCE & CLEANING

Clean the lint filter at the end of every drying cycle:

1. Open the door.
2. Pull the filter upwards.
3. Remove lint using a soft brush or your fingertips.
4. Push the filter back into place.

TROUBLESHOOTING GUIDE

If a fault occurs, before contacting our After-Sales Service, make the following checks to try and remedy the problem:

Drying takes too long / laundry is not dry enough:

- Was the correct programme selected?
- Was the inserted laundry too wet (Washing machine spin speed less than 800 rpm)?
- Is the lint filter dirty (filter indicator lamp on)?

The dryer does not operate:

(after a power failure and/or interruption to the mains supply, always press the Start button).

- Is the plug properly inserted into the mains electricity socket?
- Is there a power failure?
- Has the fuse blown?
- Is the door well closed?
- Has the programme been selected?
- Has the start-delay option been selected?
- Are the END and Anti-crease indicator lamps lighting up? The drying cycle is complete and the laundry can be taken out.
- Has the **Start/Pause** button been pressed?

Lint filter indicator lamp on:

- Is the lint filter clean?
- Is the vent hose blocked?

All programme sequence indicators blinking:

- Service call necessary.

Replacing the drum light bulb (if supplied):

- If the inside lamp does not work, the bulb may be faulty.
- **Unplug the dryer.**
- Open the door and unscrew the glass

cover inside the drum.

- Replace the faulty bulb with a new one and screw the glass cover back on.
- Replacement bulb: Philips 15W, 230/240V, E14.

AFTER-SALES SERVICE

If, after carrying out the above checks the malfunction persists or appears again, turn the dryer off and call our After-Sales Service (refer to guarantee).

Please specify:

- The nature of the fault.
- The dryer type and model.
- The service code (the number after the word Service on the adhesive rating plate) on the right-hand side when the door is open.
- Your full address and phone number.

SERVICE 0000 000 00000

